


INSTALLATION INSTRUCTIONS

1. Install mirror metal bracket onto wall.
2. Make sure that mirror metal bracket is leveled horizontally, then insert metal hooks at the back of the mirror into metal bracket openings.

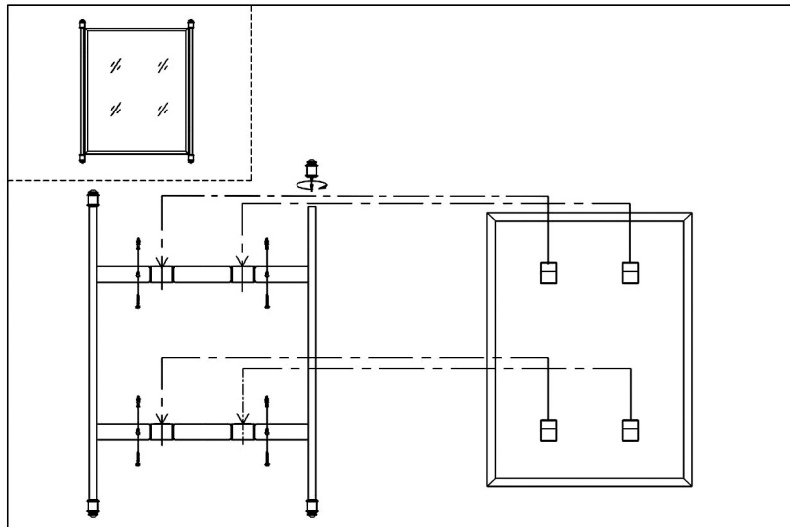

Rectangle Mirror

TY FOBARE
Bath Lighting & Accessories

Ty Fobare, Inc. 615. 595. 7161 www.tyfobare.com